


PELARSTÄLL

Standard, Typ D71

D61 med mellanplatta

1. Välj styrpelare, typ och längd. Se sidan B:7–8.
2. Välj bussning, typ och längd. Se sidan B:9.
3. Fästtapp och läge. Se sidan H:11.
4. Passningsklass 2 levereras som standard om ej annat anges.

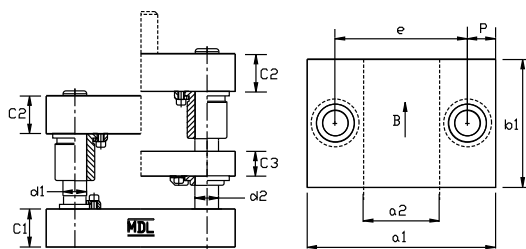

Artikelnr	a1	Arbetsyta B		C1 ±1	C2 ±1	C3 ±1	d1/d2	P	e
		a2	b1						
D71.010.008	225	100	80	32	25	25	24/25	39	147
D71.012.008	250	125							172
D71.016.008	285	160							207
D71.020.008	325	200							247
D71.010.010	225	100	100	40	32	28	30/32	43	147
D71.012.010	250	125							172
D71.016.010	285	160							207
D71.025.010	390	250							304
D71.012.012	265	125	125	50	40	32	30/32	43	179
D71.016.012	300	160							214
D71.020.012	340	200							254
D71.031.012	455	315							369
D71.016.016	300	160	160	50	40	32	30/32	43	214
D71.020.016	340	200							254
D71.025.016	390	250							304
D71.031.016	455	315							369
D71.020.020	367	200	200	50	40	32	38/40	52	263
D71.031.020	482	315							378
D71.031.025	482	315							250